American DJ





User Instructions

American DI

4295 Charter Street Los Angeles Ca. 90058 www.americandj.com

4-Play[™] Introduction

Introduction:

Thank you for purchasing the American DJ 4-Play.[™] To optimize the performance of this product, please read these operating instructions carefully to familiarize yourself with the basic operations of this unit. The American DJ_® 4-Play[™] is a Sound-Active unit and must have a sound source to perform properly. Also, we strongly recommend using a fog machine or high tech smoke to enhance the appearance of the mu lit-colored beams tunnels this unit will produce.

Customer Support:

American DJ_® provides a toll free customer support line, to provide set up help and to answer any question should you encounter problems during your set up or initial operation. You may also visit us on the web at www.americandj.com for any comments or suggestions.

Service Hours are Monday through Friday 9:00 a.m. to 6:00 p.m. Pacific Standard Time.

Voice:	(800) 322-6337
Fax:	(323) 582-2610
E-mail:	support@americandj.com

Warning! To prevent or reduce the risk of electrical shock or fire, do not expose this unit to rain or moisture.

Caution! There are no user serviceable parts inside this unit. Do not attempt any repairs yourself, doing so will void your manufactures warranty. In the unlikely event your unit may require service please contact your nearest American DJ dealer.

Please recycle when ever possible. Do not discard the shipping carton in the trash.

HALOGEN LAMP WARNING!

This fixture is fitted with a halogen lamp which is highly susceptible to damage if improperly handled. Never touch lamp with your bare fingers as the oil from your hands will shorten lamp life. Also, never move the fixture until the lamp has had ample time to cool. Remember, lamps are not covered under warranty conditions.

4-Play[™] Basic Operation

General Operation:

This fixture is designed to operate as a stand alone unit, there is no need of a controller. It has been tested and lamped at the factory there is no assembly necessary. The 4-PlayTM is ready to be plugged in and used right out of the box. There is no power switch, after plugging the unit if there is no lamp output check the fuse and bulb. Sometimes the lamp becomes loose during shipping and transit. If lamp does not turn on after you plug the unit in, open the lamp cover to be sure the lamp is seated properly. If the fuse and bulb are good, please call our customer support line for further instructions.

After plugging the 4-Play[™] in, the unit will produce multiple colored beams that rotate in a circular motion. The four dichoric mirrors of the 4-Play[™] can be adjusted, to optimize area coverage. The 4-Play[™] will react to low frequencies of music via an internal microphone. This fixture features a light weight case design and a hanging bracket. This fixture is designed for mobile DJ's, clubs, bands, roller rinks and any arena that requires a compact, light weight, easy to use fixture.

Be sure not to obstruct cooling vents and keep in a well ventilated area. For best results, use fog or special effects smoke to see the beams of light.

4-Play[™] Fuse & Lamp Replacement

Caution: Always replace with the exact same type lamp and fuse, unless otherwise specified by an authorized American DJ_{\odot} technician.

Fuse Replacement:

Disconnect the unit's main power supply. Find the fuse holder located on the rear of the, next to the power cord. Insert a standard flat head screw driver in to the fuse holder housing. Turn the screwdriver in counter-clockwise direction to remove the fuse holder. Remove the old fuse and discard it, replace the fuse with the same type. Insert the fuse holder with the new fuse back into it's housing.

If you continue to blow fuses, STOP using the unit. Return the unit for servicing. Continuing to use the unit may cause serious damage.

4-Play[™] Fuse & Lamp Replacement Cont.

Lamp Replacement:

Disconnect the unit's main power supply. Located the lamp cover on the front of the unit. Remove the thumb screw that retains the lamp cover and remove the lamp cover. Remove the old lamp and replace with a new one. Be sure to follow all the lamp handling instructions that are included with the new lamp. Reassemble in reverse order.

Caution: Never touch a new lamp with your bare fingers. If you continue to blow lamps, STOP using the unit. Return the unit for servicing. Continuing to use the unit may cause serious damage.

4-Play[™] Cleaning

Fixture Cleaning:

Due to fog residue, smoke, and dust cleaning the internal and external optical lenses must be carried out periodically to optimize light output.

- 1. Use normal glass cleaner and a soft cloth to wipe down the outside casing.
- 2. Use a brush to wipe down the fan grill.
- 3. Clean the external optics with glass cleaner and a soft cloth every 20 days.
- 4. Clean the internal optics with glass cleaner and a soft cloth every 30-60 days.
- 5. Always be sure to dry all parts completely before plugging the unit back in.

Cleaning frequency depends on the environment in which the fixture operates (I.e. smoke, fog residue, dust, dew). In heavy club use we recommend cleaning on a monthly basis. Periodic cleaning will ensure longevity, and crisp output.

4-Play™ Specifications

Technical Specifications:

Model: 4-Play™

Lamp:	ZB-64514 120v/300w
Voltage:	110v~120v
Dimensions:	6"H x 6.5"W x 19.5"L
Colors:	Multi-colored dichroic dish
Gobos:	None
Weight:	12 Lbs.
Fuse:	6 Amp GMA
Duty Cycle:	15 min. on/10 min. off
Optics:	High Quality Glass Lens
	4 Reflective Surface Dichoric
	Mirrors
Ventilation:	Fan Cooled
Operating Mode:	Sound-Active

Please Note: Specifications and improvements in the design of this unit and this manual are subject to change without any prior written notice.